

JMS ROOM AIR SENSOR

#1	DESCRIPTION		
4D	ROOM AIR SENSOR		
	#2	SENSOR TYPE	Note: Rectangular hole for customer wiring to single gang junction box.
	2	RTD 2 wire	E Thermocouple type E
	3	RTD 3 wire	J Thermocouple type J
	4	RTD 4 wire	K Thermocouple type K
			N Thermocouple type N
			T Thermocouple type T
			X Other, specify
		RTDs are 100 Ohm $.00385 \Omega / \Omega / ^\circ\text{C}$, Class A.	
	#3	TRANSMITTER OPTIONS	
	8H	Isolated transmitter	Note: Add span range after transmitter selection. Example: 8H(0-200C).
	8N	Non-isolated transmitter	Note: Transmitter output=4-20mA. (See section 8 for other options).
	8I	Hart protocol	
	8E	Intrinsically safe	
	8D	Hart/intrinsically safe	
	Z	Terminal block (no transmitter)	
	4D	3	8H (0-100F)

